

Inner Panelling – Upper A-Pillar, Remove and Install





Remove

Important: Upper A-pillar inner panelling (1) is slid in between A-pillar and instrument panel padding. For vehicles with curtain airbags, the upper A-pillar inner panelling is also positioned with a clip. This clip bears the label Airbag. If damaged, all attaching parts of the upper A-pillar inner panelling (clips) must be replaced with genuine Aftersales parts.

1. Inner Panelling – Upper A-Pillar, Replace

- Unclip upper A-pillar inner panelling
Note: For vehicles with curtain airbag, remove positioning clips (2).
- Remove upper A-pillar inner panelling
Note: Damaged attaching clips must be replaced.

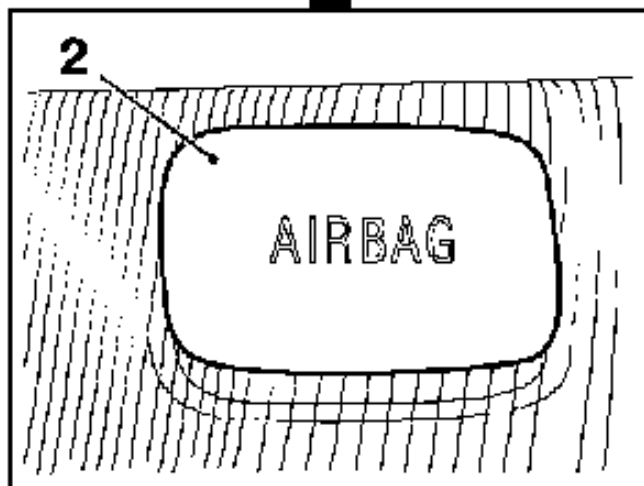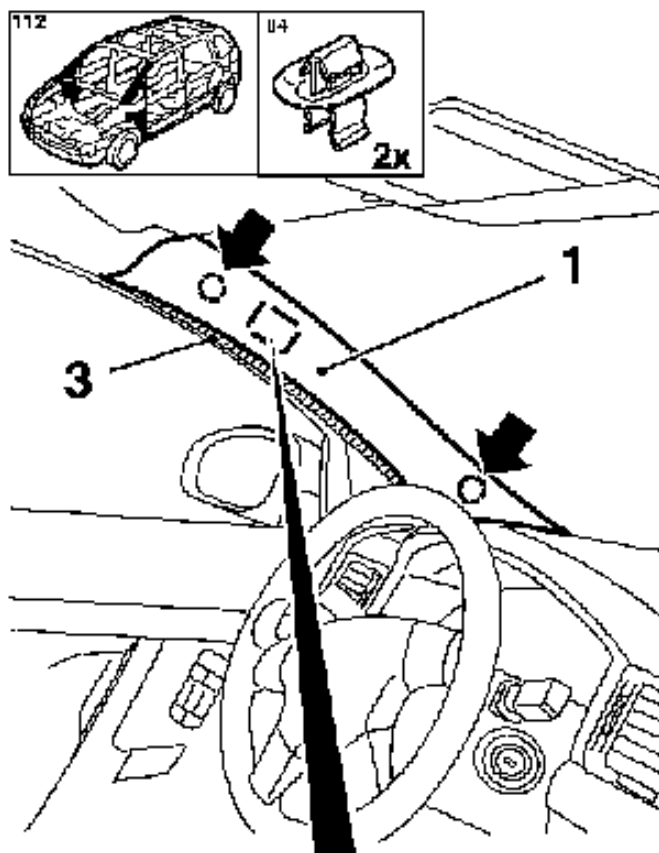


K0005901



Install

- ### 2. Install upper A-pillar inner panelling
- Position upper A-pillar inner panelling
 - Clip in upper A-pillar inner panelling
Note: The inner sealing lip (3) of the

front door weatherstrip is located above the upper A-pillar inner panelling.

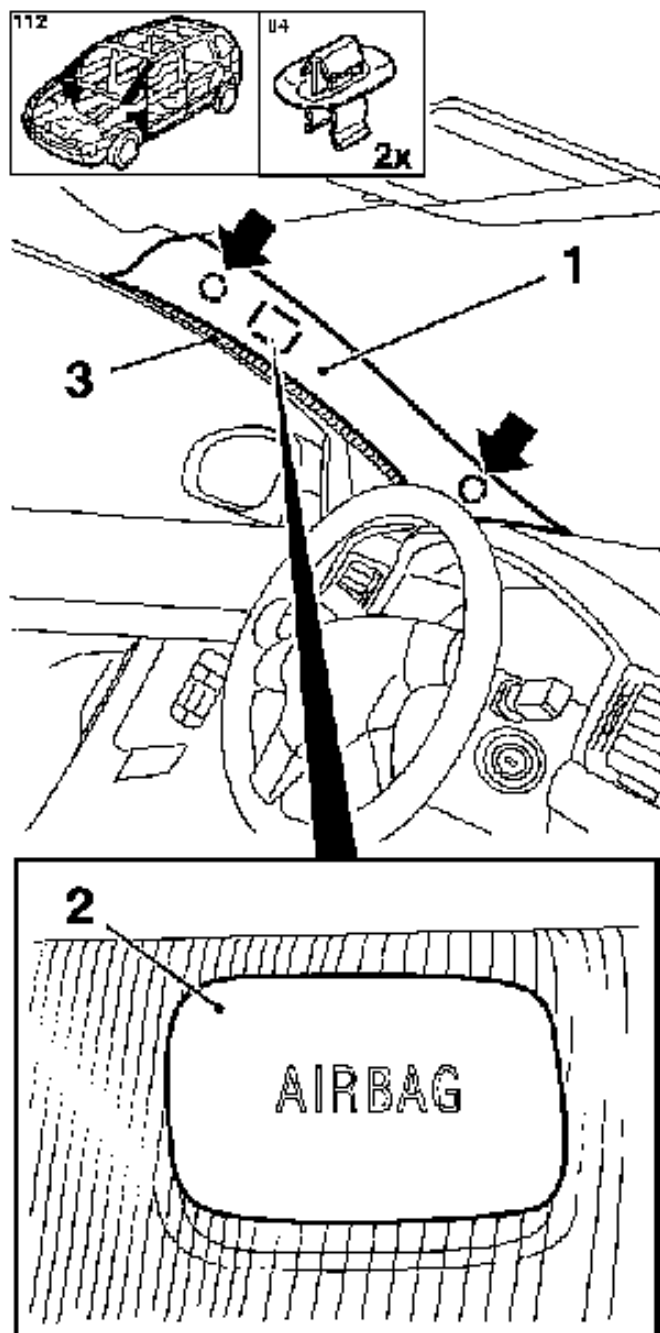

K0005901