

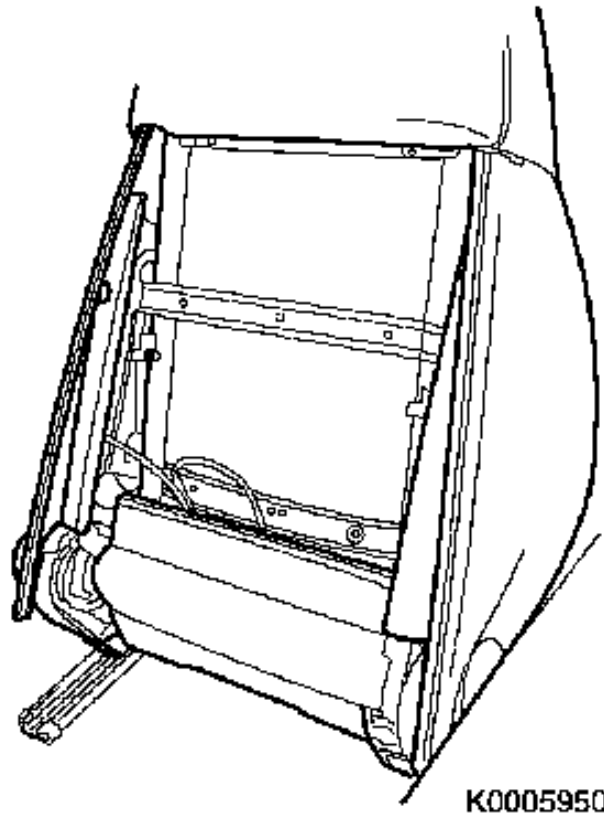


Side Airbag, Remove and Install

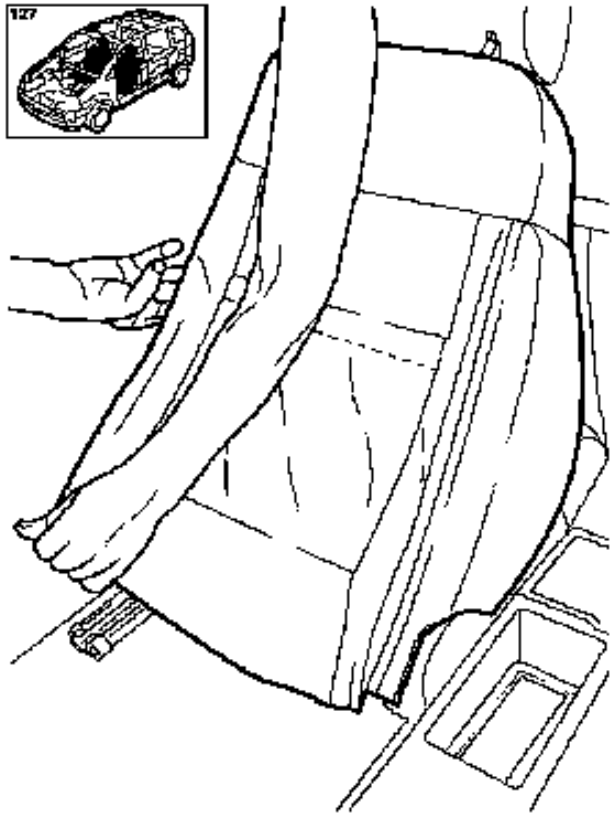

Remove

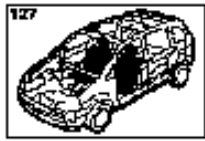


K0005950

1. Move front seat forwards in longitudinal adjustment
2. Incline front backrest forwards

Warning: Wait 1 minute after disconnecting the battery until the capacitor has discharged.

3. Disconnect battery.
4. Open rear door
5. Remove upholstery covering from front backrest
 - see operation "Front Backrest Cover, Remove and Install"
 - see operation "Front Backrest Cover, Remove and Install (Dump Latch Seat)"

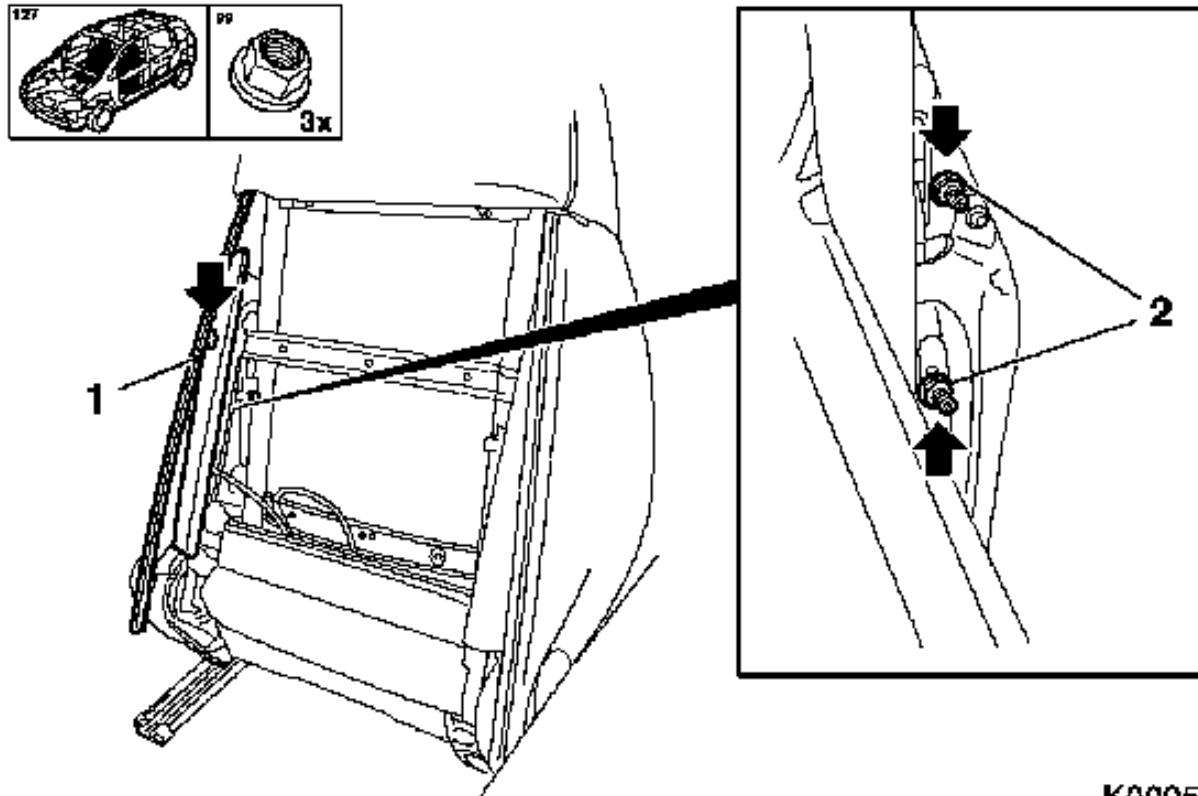

K0005951

6. Remove side airbag



- Loosen 1x nut (1)
- Unscrew 2x nut (2)

Note: Use magnetised socket wrench insert.

Warning: Always set aside airbag unit with padded side upwards.

7. Pull side airbag (1) out of trimbox trimming

- Release wiring harness plug (2) and disconnect.
- Remove side airbag

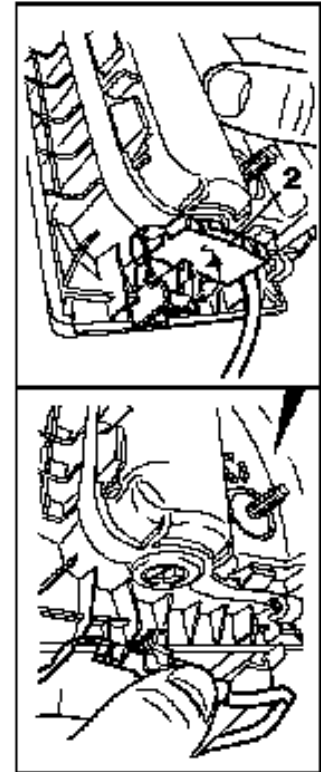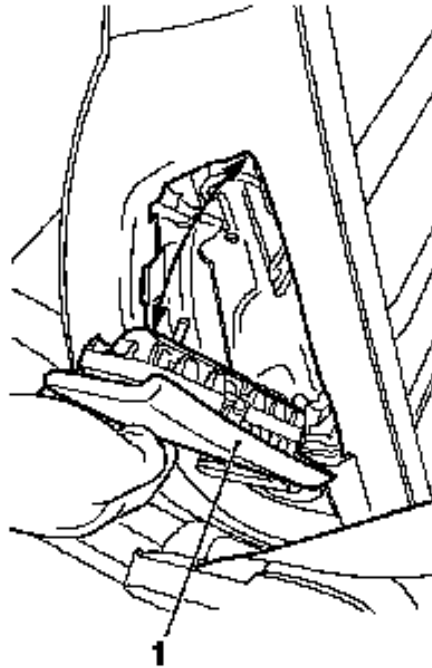

K0005852

**Install**

Warning: Nuts for side airbags are self-locking and must be replaced. Ensure correct engagement of the side airbag cable harness plug.

8. Install side airbag
 - Connect wiring harness plug
 - Lock wiring harness plug
 - Insert side airbag into trimbox trimming
 - Screw in 3x nut – tightening torque **5 Nm**
9. Attach upholstery covering on front backrest
 - see operation "Front Backrest Cover, Remove and Install"
 - see operation "Front Backrest Cover, Remove and Install (Dump Latch Seat)"
10. Close rear door
11. Connect battery

**Inspect**

12. Readiness check for airbag system

Note: After ignition ON, the airbag system readiness telltale illuminates for approx. 4 seconds and then goes out.
13. Move front seat into original position
14. Program volatile memories.