


## Tyre Pressure Sensor, Remove and Install



### Remove

1. Detach the affected wheel
  - Unscrew 5x bolt
  - Note:** Mark position relative to the wheel hub.
2. Take tyre off rim
3. Detach tyre pressure sensor
  - Unscrew nut (1)
  - Remove tyre pressure sensor
  - Note:** Ensure correct installation position.

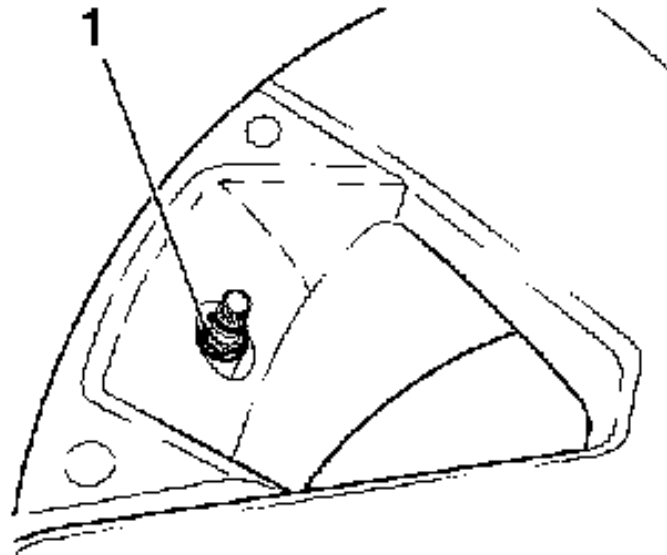

K0010245




### Install

4. Attach tyre pressure sensor
  - Insert tyre pressure sensor with new set of seals (seal ring, valve insert and dust cap)
  - Note:** Ensure correct installation position. The flat side of the valve body must face the hub of the rim.
  - Tighten nut (1) (10 Nm)

**Important:** To prevent damage to the tyre pressure sensor, the tyre must be fitted onto the rim, starting at (2) approximately 20° from the valve and working in the direction of the arrow.

5. Fit the tyre onto the rim and balance it

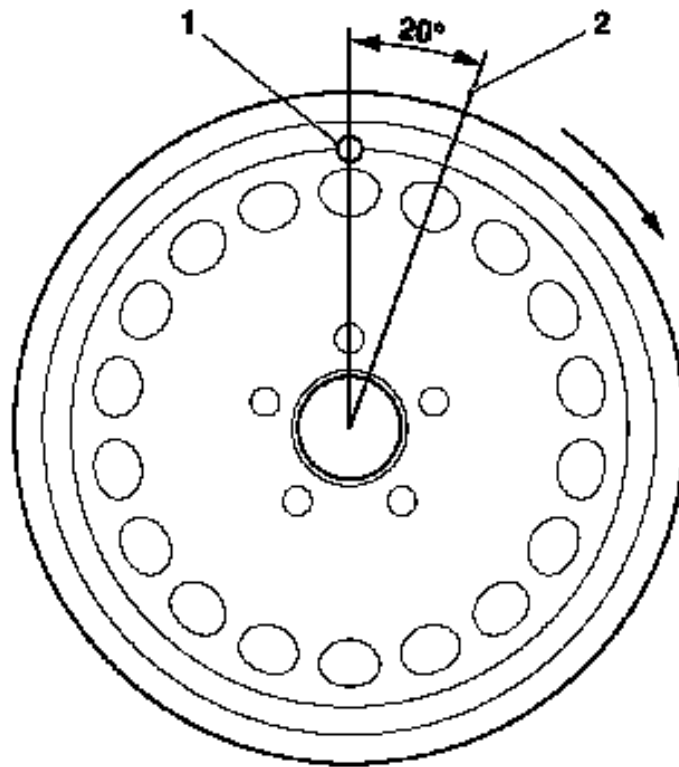

K0010256

6. Replace the wheel on the vehicle
  - Tighten 5x bolts (**110 Nm**)
  - Note:** Ensure correct installation position.