


Rear panelling, remove and install - Model F 48



Remove

1. Partially release rear wheel housing protective panelling
 - 6x bolt
2. Release lower rear panelling
 - Unclip 2x bracket
3. Release upper bolt cover (1)
 - 4x bolt
 - detach at side
4. Detach rear panelling

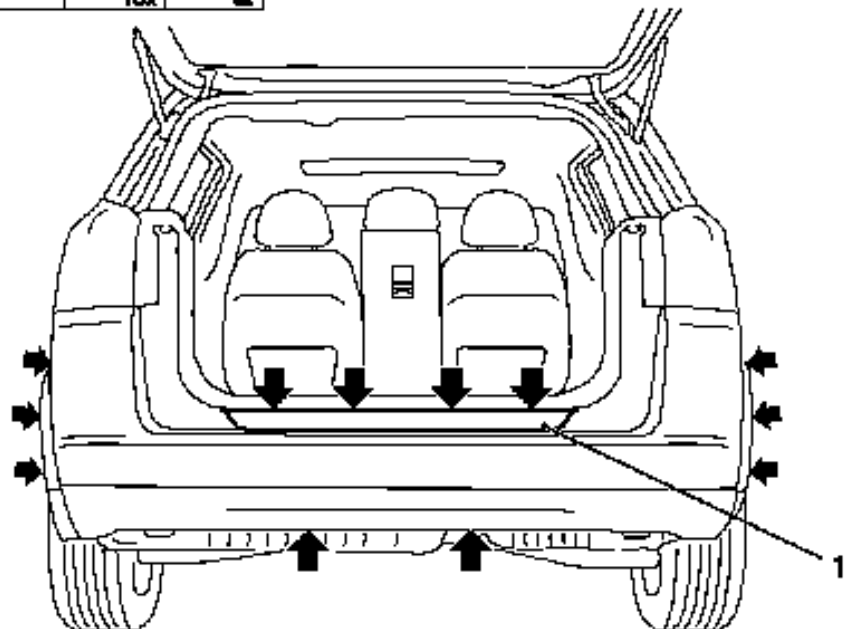

K0007008



Install

5. Position rear panelling
6. Attach rear panelling
 - attach at side
7. Fasten upper rear panelling
 - 4x bolt
8. Secure lower rear panelling
 - Clip in 2x bracket
9. Secure rear wheel housing protective panelling
 - 6x bolt