

Steering Wheel, Remove and Install




Remove

Warning: After disconnecting battery, wait 1 minute until the capacitor has discharged.

1. Disconnect ground cable of battery
2. Remove driver's side airbag unit
 - see operation "Airbag Unit – Driver's Side, Remove and Install" in group "C".
3. Move steering to straight-ahead position and lock
 - Pull out ignition key.
 - Allow steering lock to latch in
4. Release wiring harness plug (1) and disconnect
5. Unscrew steering wheel fastening bolt (2)
6. Check mark on steering wheel and steering shaft

Note: Mark on steering wheel and steering shaft must coincide. Marks face downwards.
7. Detach steering wheel

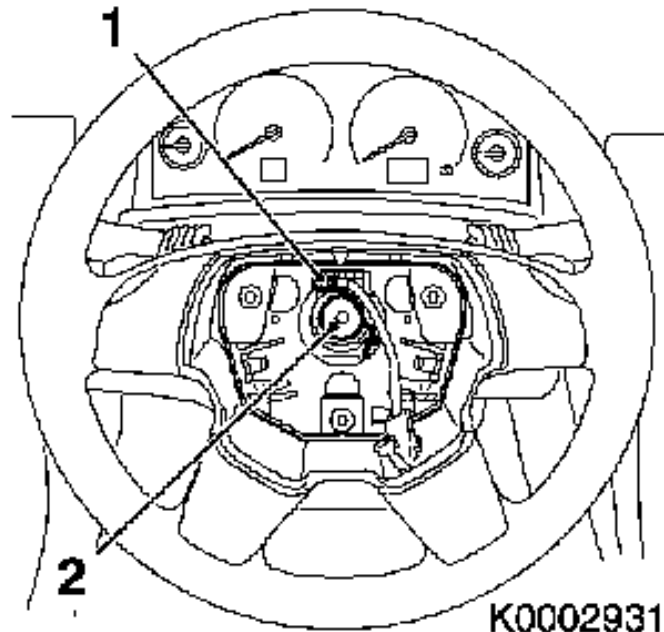

Clean



8. Clean thread for fastening bolt of steering wheel in steering shaft and clean bolt



Install


9. Connect steering wheel to steering shaft

Note: Mark on the steering wheel and steering shaft must coincide (arrows). Marks face downwards. Carrier (1) must align with the recess in the steering wheel hub (2)

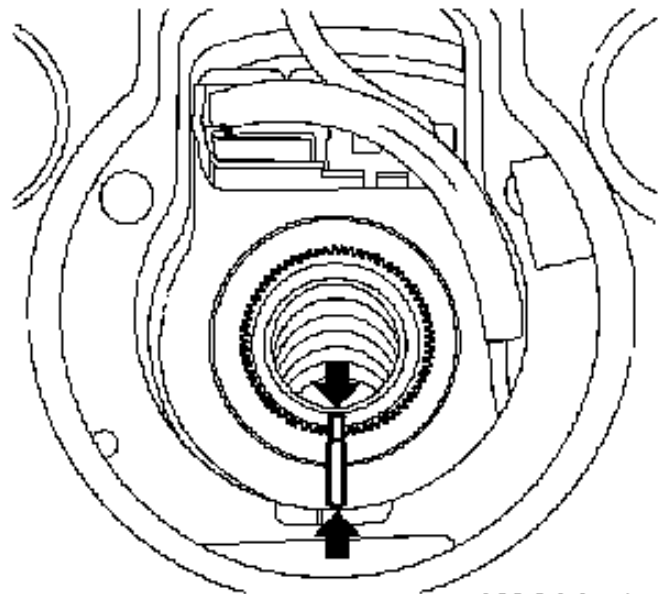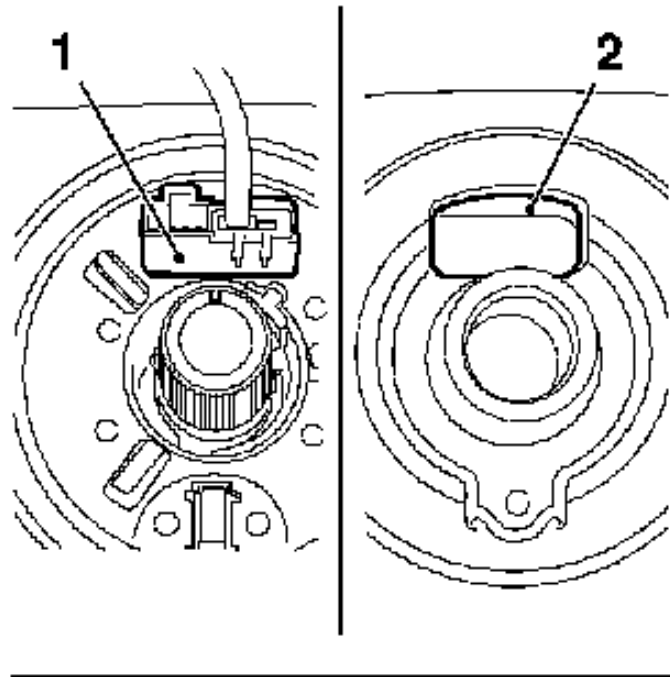

K0008515

10. Install steering wheel fastening bolt (2)
 - Insert bolt with locking compound
 - Tighten bolt (**30 Nm**)
11. Connect wiring harness plug (1)
 - Lock mechanism latches in audibly

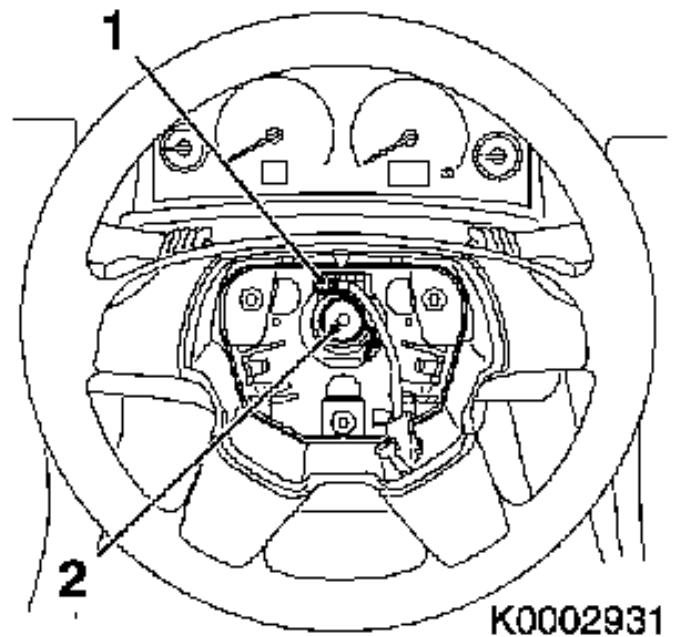

12. Install driver's side airbag unit
 - see operation "Airbag Unit – Driver's Side, Remove and Install" in group "C".
13. Connect ground cable to battery.
14. Program volatile memories

**Inspect**

15. Check function of horn and airbag telltale.
16. If present: check function of radio remote control