




Auxiliary heating/ventilation*

If the engine is switched off, the interior is heated or ventilated depending on the values that have been set and the interior temperature.

The regulation is in accordance with the most recent temperature settings in the electronic air conditioning [see page 169]. When the system is switched on, the temperature setting can be varied using the outer rotary knobs.

The air is led to the windscreen and the front side windows if the  button is pressed before switching the ignition off.

Do not switch auxiliary heater on in filling stations or closed spaces [risk of fire or injury].



Direct activation

To activate directly with ignition on, call up the manual settings menu and select item **Auxiliary Heating** then select menu item **On**.

When the system is activated, the control indicator in the button **AUTO** will light up.

The system switches itself off automatically after a maximum of 60 minutes depending on the values that have been set and the interior temperature.

To switch off sooner, press **AUTO** button or select menu item **Auxiliary Heating** and then re-select menu item **On**.



Switching on at a programmed time

Three programmed times can be stored for switching on.

For safety reasons only one programmed time for switching on can be active at any one time. After the heating cycle has been completed, the next required time for switching on must be activated afresh.

To store a programmed time for switching on, call up the menu for manual settings and select item **Auxiliary Heating**.

After the menu item **Auxiliary Heating** the current status will be shown.



To set a time, select menu item **Setting**.

Then select menu item **Start 1**, **Start 2** or **Start 3** and set the required time. Then select menu item **Confirm**.



Select the required time for programmed switching on.

When the system is activated, the control indicator in the button **AUTO** will light up. The system switches itself off automatically after a maximum of 60 minutes depending on the values that have been set and the interior temperature.



To cancel air conditioning, press the **AUTO** button.

The menu for auxiliary heating can be called up within 2 hours of switching the ignition off, by pressing on the central rotary knob, and settings entered.



Remote control

The system can also be switched on and off using the remote control:

- On = Press button , the control indicator in the remote control unit will light up
- Off = Press button , the control indicator in the remote control unit will light up

Whilst the control indicator is lit up, no further signal can be sent.

When the system is activated, the control indicator in the button **AUTO** will illuminate.